Wharfedale

USER'S MANUAL

Disc Speaker for iPod

Made for iPod

iPod nano 1st generation | iPod nano 2nd generation (aluminum) | iPod mini | iPod | iPod | iPod with color dispaly | iPod with video

Please read the following instructions carefully before connecting, operating or adjusting this product.
Please keep this manual in a convenient place for future reference.

CONTENTS

Contents……1
Important safety instructions……1
What's Included……2

GETTING STARTED

Placing a correct dock insert……3
Connection to power via Power Adapter……3
Connection to power via battery……3
Connection of other audio devices by audio cable……4
Connection to TV to enjoy iPod video output……4

USING THE SYSTEM

Using the system……4
Troubleshooting……5-6

IMPORTANT SAFETY INSTRUCTIONS

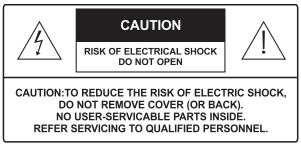
CAUTION
RISK OF ELECTRICAL SHOCK
DO NOT OPEN
CAUTION:TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING: To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.

WARNING: The apparatus should not be exposed to dripping or splashing, and objects filled with liquids. Liquids can cause a failure and/or a fire hazard.

⚡ The lightning flash with arrowhead symbol, within an equilateral triangle, alerts the user to the presence of un-insulated dangerous voltage within the system enclosure that may

⚠ be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this owner's guide.

WARNING: No naked flame sources, such as lighted candles, should be placed on the apparatus.

Note: This product is intended to be used only with the power supply provided.

Note: Where the mains plug is used as the disconnect device, such disconnect device shall remain readily operable.

Note: This product must be used in doors, It is neither designed or tested for use outdoors, in recreation vehicles, or on boats.

WARNING: Keep the battery away from children since batteries are a choke hazard. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100 C, or incinerate. Danger of explosion if battery is ꟾncorrectly replaced.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions - for all components before using this product.
2. Keep these instructions - for future reference.
3. Heed all warnings - on the product and in the owner's guide.
4. Follow all instructions.
5. Do not use this apparatus near water or moisture - Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
6. Clean only with a dry cloth - Unplug this product from the Electrical socket before cleaning.
7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions-To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings, Do not put it in a built-in system , such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.
8. Do not install near any heat sources, such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched, particularly at plugs, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Refer all servicing to qualified service personnel - Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards.
12. Do not let objects or liquids enter the product - as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
13. See product enclosure for safety related markings.
14. Use proper power sources - Plug the product into a proper power source, as described in the operating instructions or as marked on the product.

WHAT'S INCLUDED

Thanks for choosing the Wharfedale iPod speaker Music Station. This Wharfedale iPod speaker is designed specially to work with your iPod, providing a high quality audio performance for your enjoyment. Just listen to it now!
Check the carton for the parts shown in Figure 1.

Wharfedale iPod speaker digital music system | Universal Dock Adapters | User's manual | Power Adapter | Video cable and 3.5mm audio cable

Figure 1: What's included in the carton

GETTING STARTED

Before enjoying music, please follow the connections step below to set up your system.

1. Placing a correct dock insert

Choose a proper insert from No.8,9 or 10(details below) for your iPod model and put the insert into the dock (Figure 2).Then gently place your iPod into the dock.

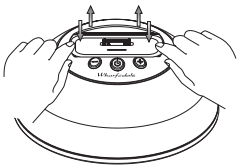

Figure2: Placing the correct dock insert into the Wharfedale iPod speaker Universal Well

NO.	8	9	10
iPod Model	iPod nano (1st and 2nd Generation)	iPod with Video (30GB)	iPod with Video (60GB & 80GB)
Universal Dock Adapters			

Note: For older generation iPod, please refer to Apple store for insert purchase.
Note: This docking station only supports iPod model with a dock connector.

2. Connection to power via Power Adapter

Connect the AC Adapter into the DC in jack and plug the AC Adapter into the wall outlet. (Figure 3)

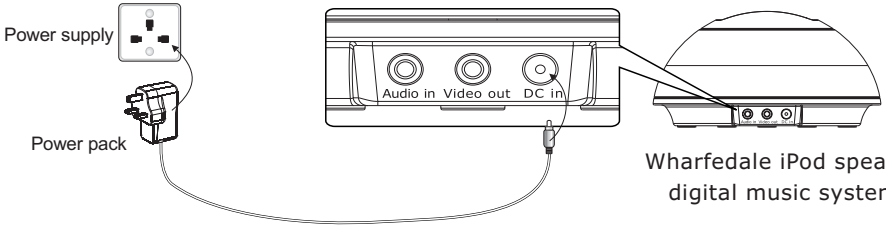

Figure 3

3. Connection to power via battery (battery not included)

Please open the battery compartment cover at the bottom of the unit, and install 4 pcs AA batteries (not included). Check the polarity of the batteries to match the "+" "-" markings inside the battery compartment. (Figure 4)

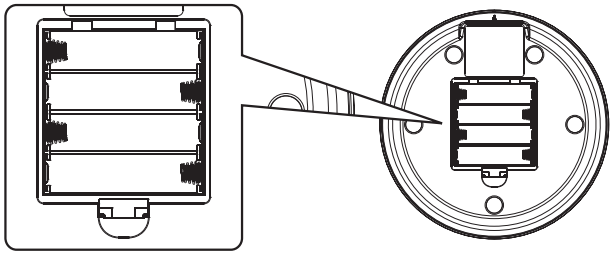

Figure 4

GETTING STARTED

4. Connection of other audio devices by audio cable

You can connect other audio device, like MP3 or any iPod without a dock connector by using the included 3.5mm audio cable to the audio in jack.

Note: When iPod is docked and audio in is connected with other device; other device will be the priority sound source.

Note: During music playback by using audio in, it's suggested to adjust your audio device loud enough to ensure the best sound quality. Then adjust the Wharfedale iPod speaker volume buttons on top to control the volume level.

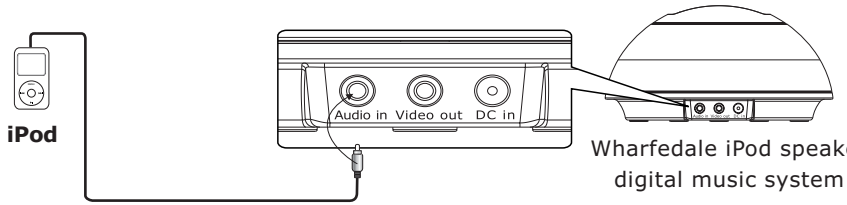

Figure 5

5. Connection to TV to enjoy iPod video output

Use the provided 3.5mm to RCA video cable to connect the 3.5mm end into the Wharfedale iPod speaker video out jack, and the RCA end to the TV. You can enjoy Video and Photo Slideshow through your TV.

Note: Remember to set your iPod TV out setting as TV on before enjoying photo or movie.If you have any questions in setting up your TV for iPod,please visit : **www.apple.com/support/ipod**.

Note: It only supports photo slideshow viewing and not for showing the status of the thumbnail preview of photos.

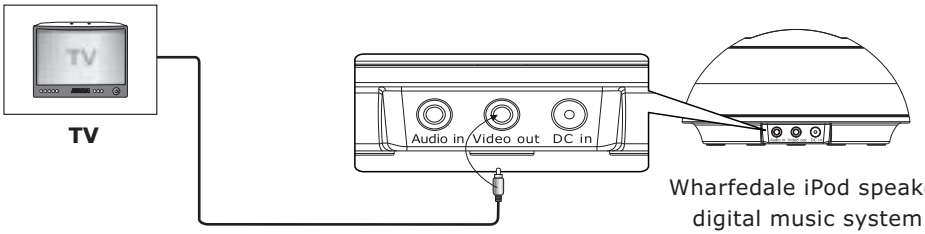

Figure 6

USING THE SYSTEM

With all the connections are done,Wharfedale iPod speaker is ready to use now. Once power adapter is connected,Wharfedale iPod speaker is power on automatically with the Power LED on top lighted up. Place your iPod into the dock, you should hear the music immediately. If you don't, please refer to "Troubleshooting".Once your iPod is docked, power is recharged automatically until it's fully charged. You can increase or decrease the volume by pressing "⊕" and "⊖" button respectively.To power off the system, please press "⏻" button on the top.

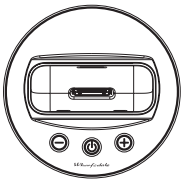

Figure 7

TROUBLESHOOTING

In case of malfunction, please power off the system immediately and check the unit according to following table. If the problem still exists, please contact the dealer or the manufacturer.

Symptom	Problem	Solution
iPod / Audio source is not responding	iPod does not dock properly	- Please ensure proper bracket is placed for your iPod.(Refer to "Placing a correct dock insert" on page 3.) - Unplug the iPod from the docking station to see any obstructions in the connector or in your iPod.
	3.5mm headphone cable isn't connected properly	- Connect 3.5mm headphone cable to the audio source. Make sure the signal cable is inserted firmly into the correct jack & is fully connected in the "line-out", "audio-out", or the headphone jack on your sound card or other audio source.
No Sound	Power cable is not connected	- Make sure the Wharfedale iPod speaker is plugged in and the LED is illuminated. - Make sure the Wharfedale iPod speaker is with battery and the battery is working if Wharfedale iPod speaker is not plugged in.
	Power isn't turned on	- Press the "Power" button, if there is no change on the indicator of the iPod, please press the "Power" button again.
	Volume Level too low	- The volume level might be too low, press "Volume" button on the panel to adjust.
	No playable file on iPod	- Make sure your iPod is on, and a track is selected for playback.
	Your iPod is not charging	- Make sure the power cable is securely plugged in to a functioning wall socket. The symbol on the small connector is matched with that on rear panel of the Wharfedale iPod speaker. (Refer to Figure 4 on page 4.) - Make sure your iPod is firmly seated in the dock.
	After quickly undocking or docking your iPod	- Remove your iPod from the dock, wait for 5 seconds, and return it to the dock. - Unplug the power cable for 1 minute, then plug it back to reset the system.
	iPod does not dock properly	- Remove your iPod from the dock, wait briefly, then reset it. You may need to do this for few times.

TROUBLESHOOTING

Symptom	Problem	Solution
Sound distortion	Volume level too high	- Slide the volume button on the panel to reduce volume.
	Sound source is distorted	- Distortion and noise are easily noticed with high-powered speakers when playing poor quality audio source, esp. WAV and MID files. Try a different audio source such as a music CD or change better quality audio player.
System is not Responding	Mal-operation	- Unplug the power cable. After 1 min, plug it again to reset the system. - Please contact customer service about this problem.

Note: Plug the iPod into the docking station ,the docking station will recharge its battery until the battery is full. To turn off the system of **Wharfedale iPod speaker** completely, please remove the iPod from the docking station and disconnect the power supply of the system.

Specification

Output Power: 3 W x 2
Driver: 2'' x 2
Rated Load Impedance: 6 Ohms
DC Adaptor Output: 6V/2A
Frequency Response: 100Hz~20kHz

Argos

Product Guarantee

This product is guaranteed against manufacturing defects for a period of

1 Year

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store.

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement.

Your statutory rights remain unaffected.

Guarantor; Argos Ltd
489 – 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW

UMA0315A

Standard complied with: S/T 11217-2000